


If you notice that the Artistic Edge is not cutting as expected, blade holder calibration may be needed. Follow the steps outlined below to calibrate.

1.

The Middle Screw is on the same ring as the number settings. To make adjustments in the blade depth, loosen the Middle Screw by turning counterclockwise using the smaller hexagonal screwdriver.

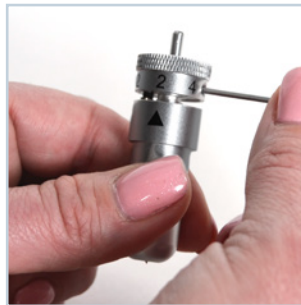

2.

A.) Use a set of needlenose pliers to grab the nut around the Blade Release Button. Turn the dial clockwise while keeping the Blade Holder Cap from rotating.



B.) A flathead screwdriver can also be used to depress the Blade Release Button until the screwdriver sits within the grooves of the dial at the base of the button.



3.

To check that the blade depth is adjusted correct, turn the Blade Holder Cap to align the arrow with the number 2 setting. At this setting, the blade should protrude from the base of the Blade Holder, approximately the thickness of a sheet of paper. Test the setting by inserting a blade into the holder and with your hand, swipe the base of the blade holder on top of two pieces of scrap paper. Only the top layer should be cut.



4.

When the adjustments are complete, tighten the Middle Screw by turning clockwise.

